

## **Cleaning Method**


## X Lower Grease Collecter

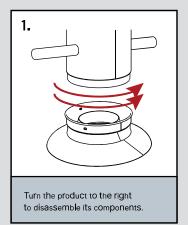


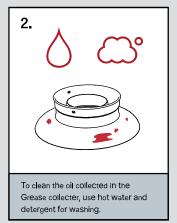




## X Filter box and Filter

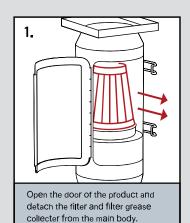


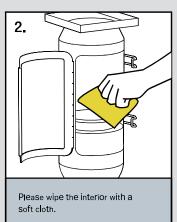



Pipe

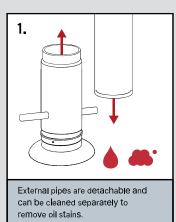

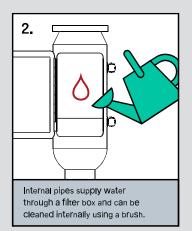

- 3. To detach the internal pipe (upper) from the external pipe (lower) slightly lift the pipe connection then turn the external pipe to the left and pull it down to separate.
- The ball bearing can be separated from the pipe by applying force from the inside to the outside.
  If oil stains are not completely removed the parts can be replaced through additional purchase.
- 5. When cleaning the pipe connection wrap a cleaning cloth around a stick and gently wipe the gap between the internal pipe and the pipe connection.